



TINY® Upgrade

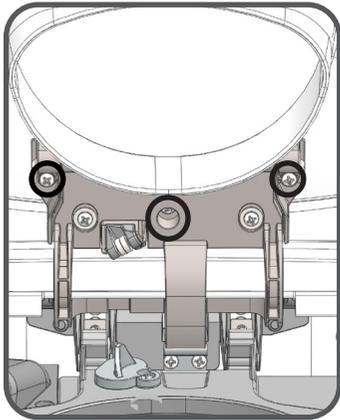


- 1.** Open the upper part and unscrew the three marked screws


Don't forget the hidden screw in the middle

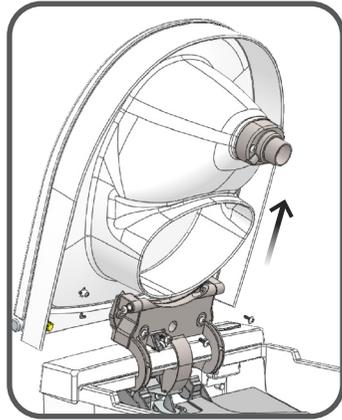


- 2.** Remove the upper part

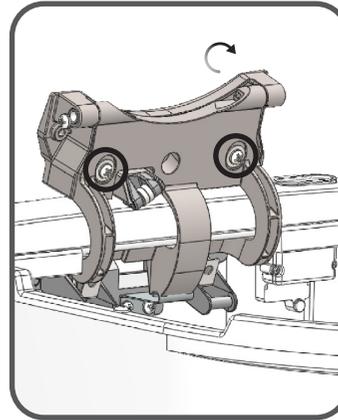


- 3.** Remove the two marked screws and open the mechanism

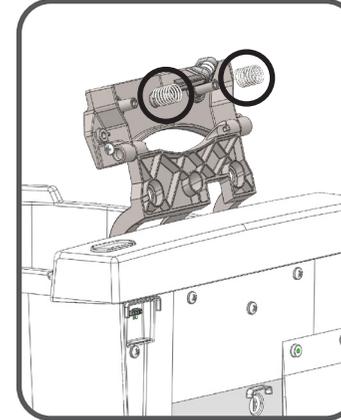

- 4.** Exchange the two old springs with the two new ones

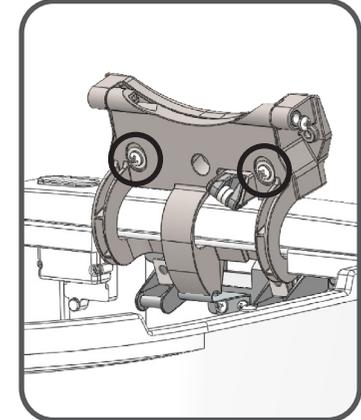


- 5.** Close the mechanism and screw in the two marked screws

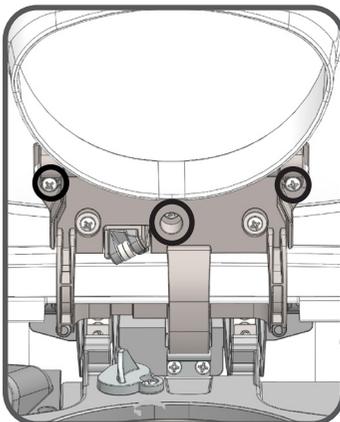


- 7.** Put the upper part back in place and screw in the three marked screws

Don't forget the hidden screw in the middle

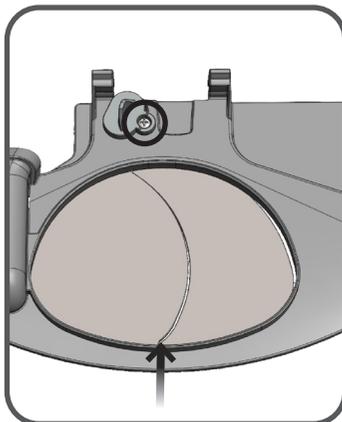


- 8.** Remove the concealer screen and unscrew the marked screw

Make sure that the concealer screen have the correct angle

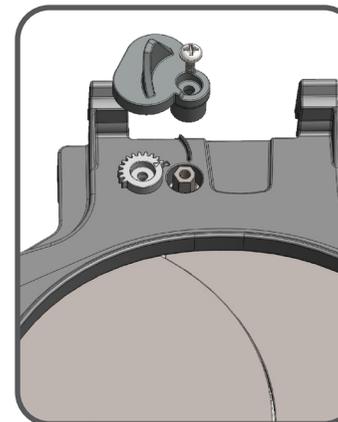

- 9.** Exchange the rotation mechanism ("fin") and place it correctly. Put the concealer screen back in place

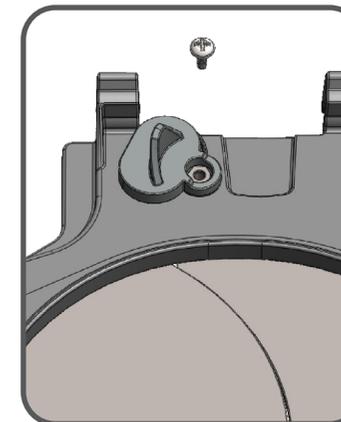

- 10.** Place the rotation mechanism correctly. Put the concealer screen back in place